



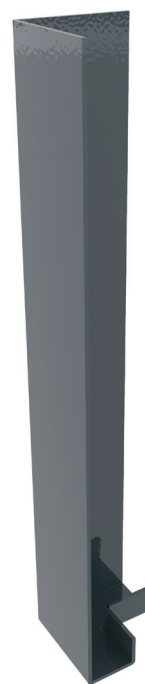

INSTALLATION GUIDE

GutterClad™ Aluminium Fascia

Installation using Secret-Fix Sleeve

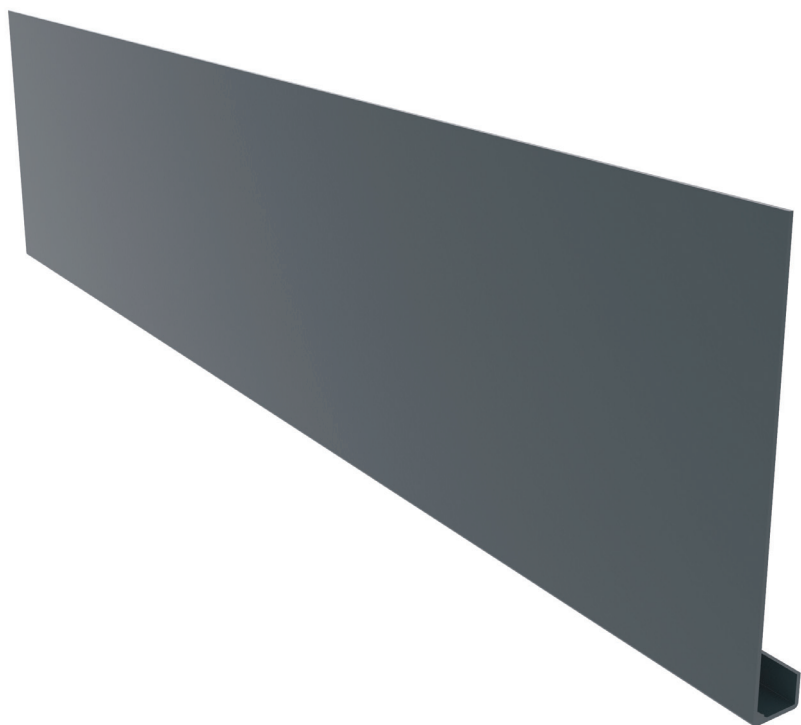



INSTALLATION GUIDE

GutterClad™ 2mm Aluminium Fascia

INSTALLATION USING SECRET FIX SLEEVE

The secret fix sleeve ensures the Fascia won't "flap" in these areas despite not being fixed at the bottom.

Step 1: Fixing of Secret Fix System

Secret fix sleeve fixed with 1 no. screws on the front face with 1 to the underside. Secret fix sleeves should be installed at 500mm c/c or closer depending on quantity available. Secret Fix components can only be fixed in eaves areas where gutter is also being used.

Step 2:

For fascia panels supporting guttering, hinge the fascia over the already in place secret fix sleeves. Fix with 1 no. screw above the gutter line at a maximum of 600mm centres. These are only to hold the fascia before gutter is screwed on. Additional fixings may be required for fascia's over 250mm deep.



Step 4:

Slide the next fascia piece over the jointer ensure there is at least a 3mm expansion gap between fascia panels. Fix this fascia piece as before.

Step 5:

Repeat along straight lengths.

Step 6:

At corners repeat the system using jointers as before and affix the corners with 1 no. fixings to each side of the face.

